 


# POLUGA

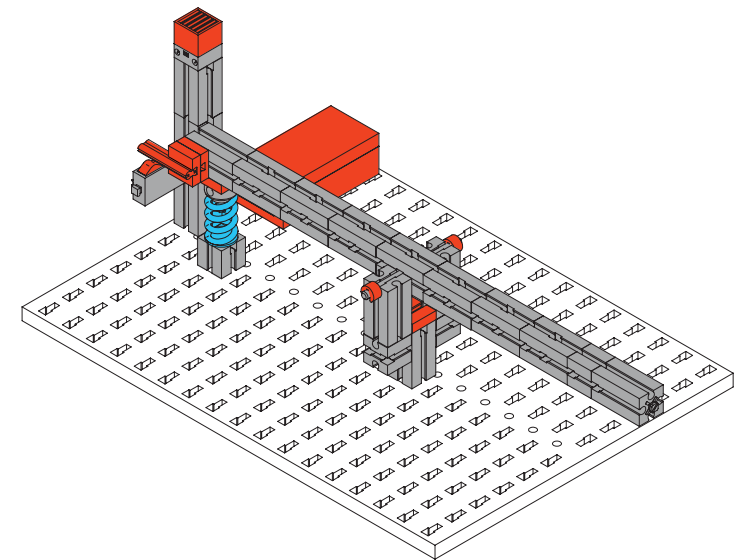

POLUGA

13



40000 Čakovec,  
Travnicka 18  
tel: 040/364-445  
fax: 040/364-230

 








 
 
 
 
 
 

 
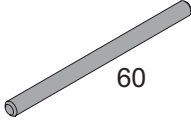 
 
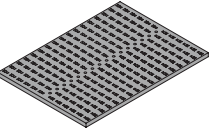 
 
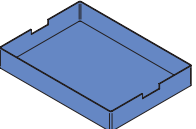 
WEB: <http://www.didakta.hr>  
E-mail: [didakta@ck.t-com.hr](mailto:didakta@ck.t-com.hr)



13


# POLUGA
 
# ELEMENTI

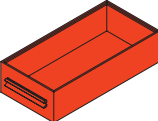
1		31061	1		35079
1		31426	3		37237
1		31436	2		37238
1		31891	2		37679
1		31892	1		37783
1		32233	1		37869
1		32263	1		38216
9		32879	1		38225
7		32880	1		38416
4		32881	1		32985
1		32263	1		36360





# POLUGA - model B

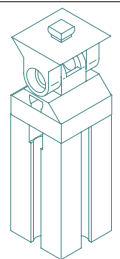8

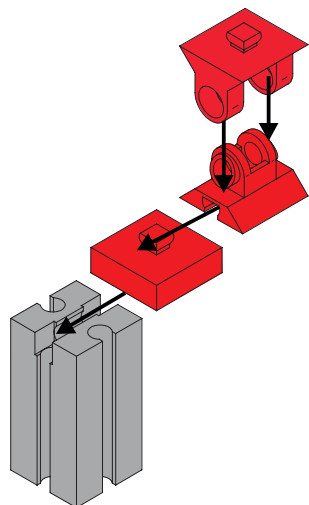 


SKLOP 7

  
 


- 13
-  x 1 - 31426
-  x 1 - 31436
-  x 1 - 32879
-  x 1 - 37238

 
kukicu za spajanje  
dinamometra možete  
proizvoljno pomicati  
po poluzi. Za mjerenje  
kraka sile do kukice  
koristite se trokutom  
ili ravnalom

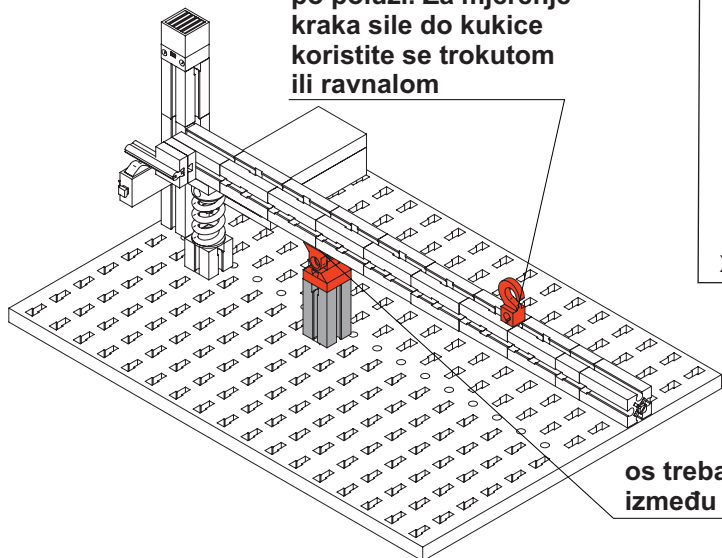

 
os treba postaviti  
između dva elementa

 
 
- 14
-  x 1 - 38225
-  x 1 - sklop 7

 
 
1

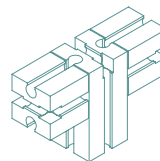 



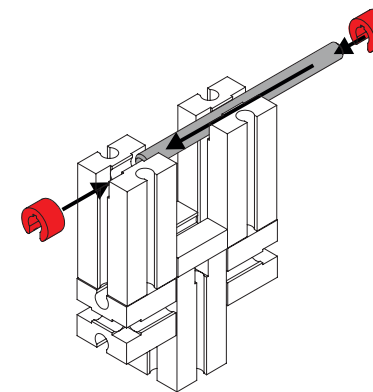 
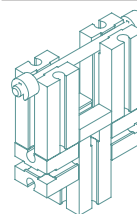 
SKLOP 1

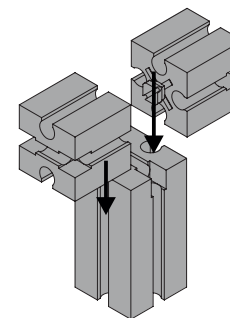



- 1
-  x 1 - 32879
-  x 2 - 32881



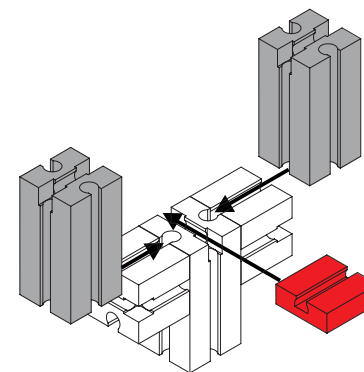
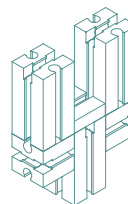


 - 2
-  x 2 - 32879
-  x 1 - 37237

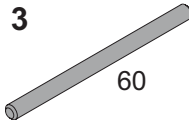

- 3
-  60  
x 1 - 38416
-  x 2 - 37679

    60

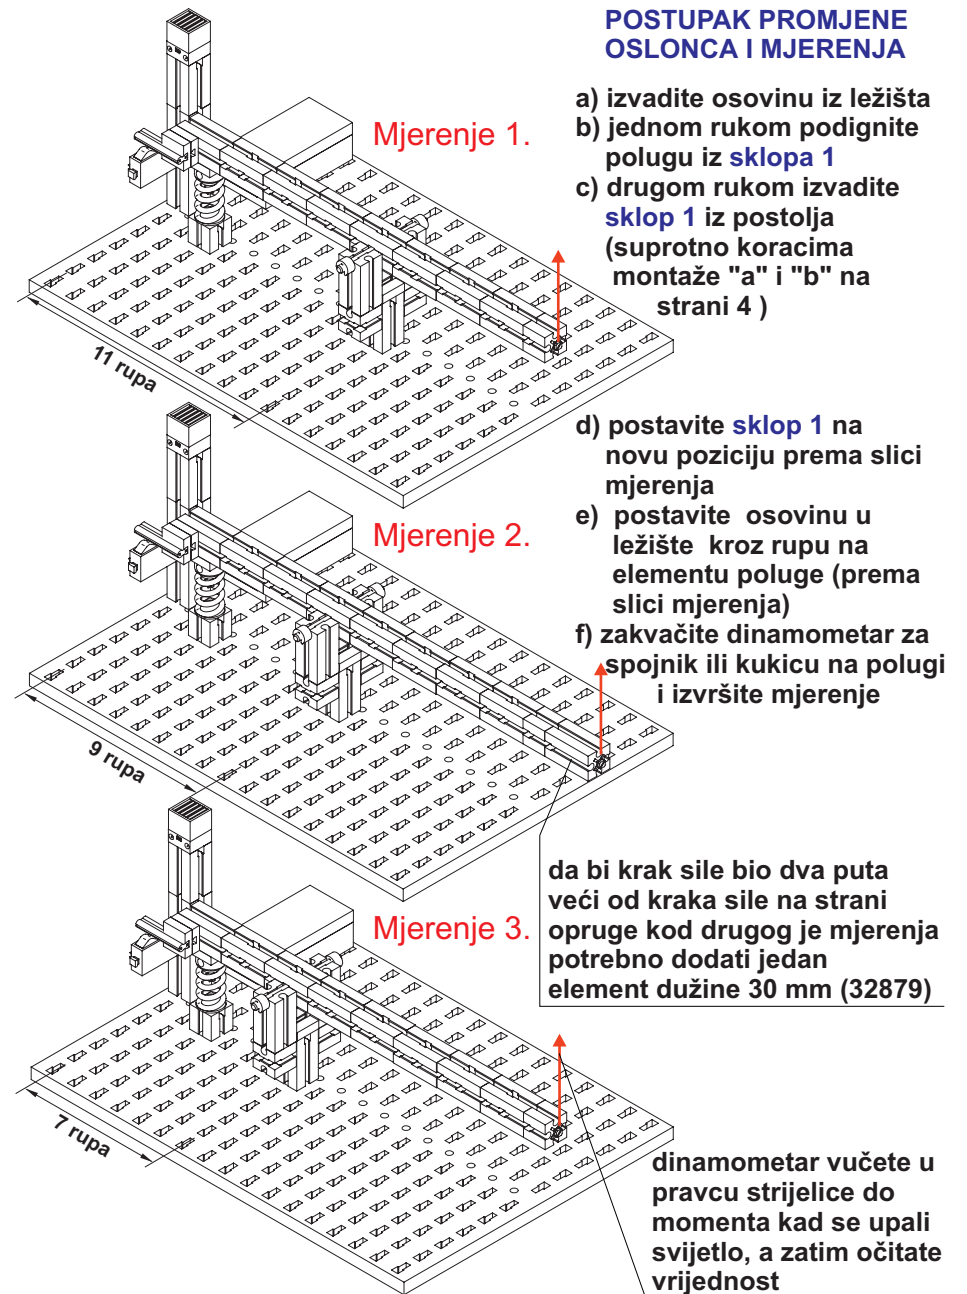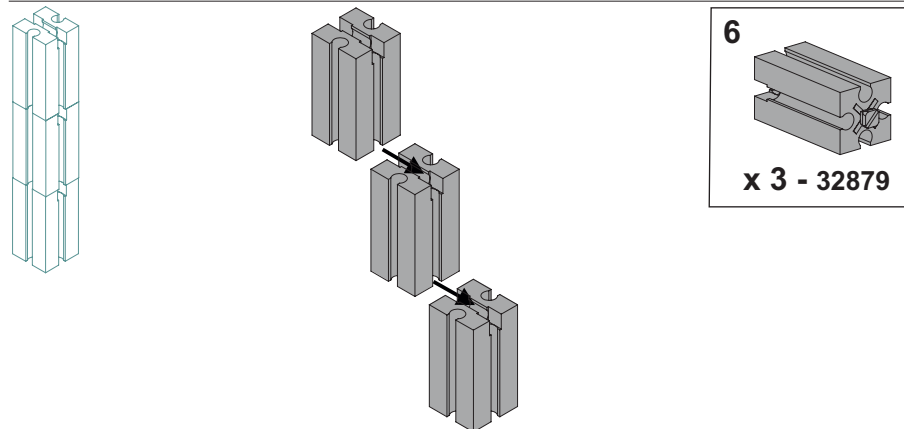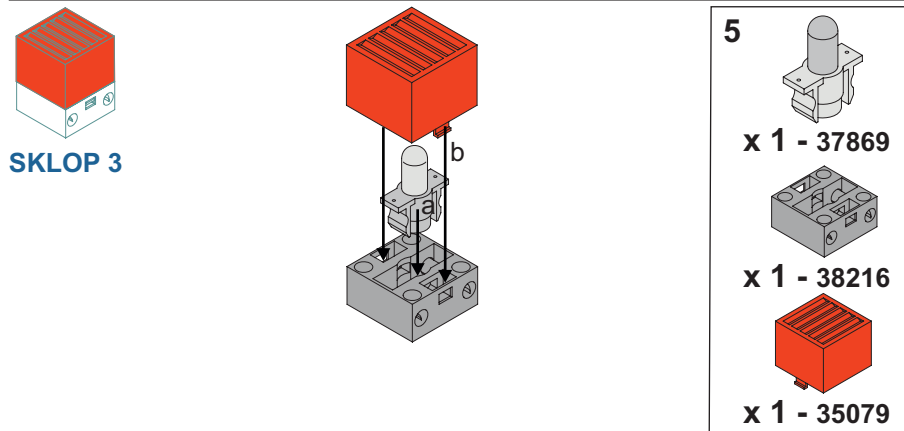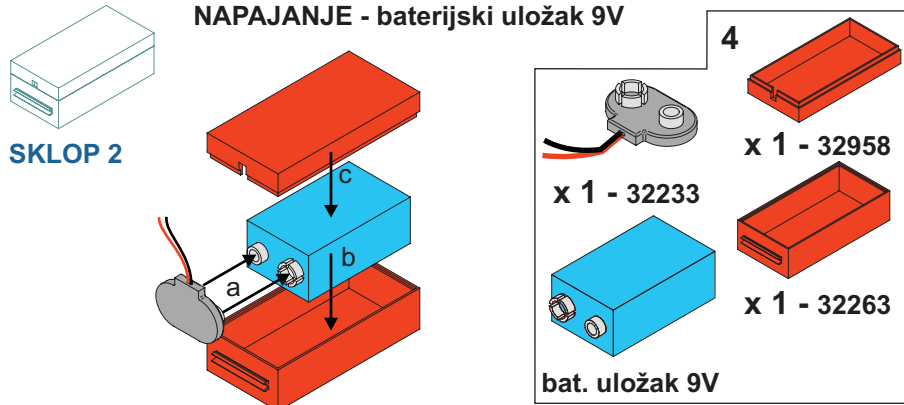


6

**NAPAJANJE: baterijski uložak 9V**

 
Utikače (buksne) možete prključiti i sa suprotne strane, ali u iste kontakte.

Pazite da ne napravite kratki spoj.  
Provjerite spojeve prije nego priključite crvenu žicu na svijetlo.

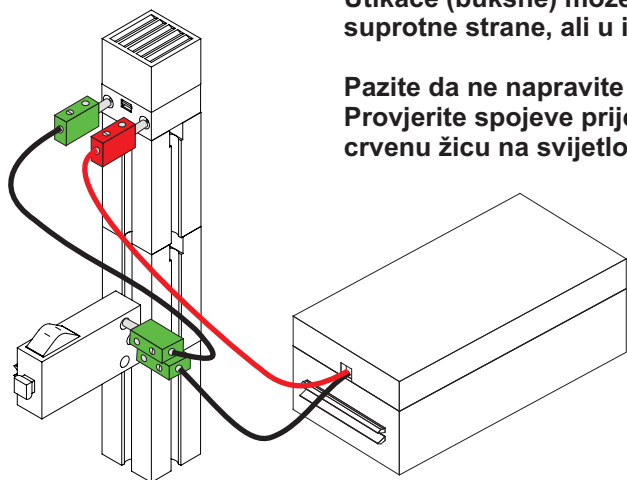
**NAPAJANJE: univerzalni adapter (220V - 9V) i regulator napona "POWER-CONTROLER"**

Utikače (buksne) možete prključiti i sa suprotne strane, ali u iste kontakte.

 
Pazite da ne napravite kratki spoj.  
Provjerite spojeve prije nego uključite prekidač.

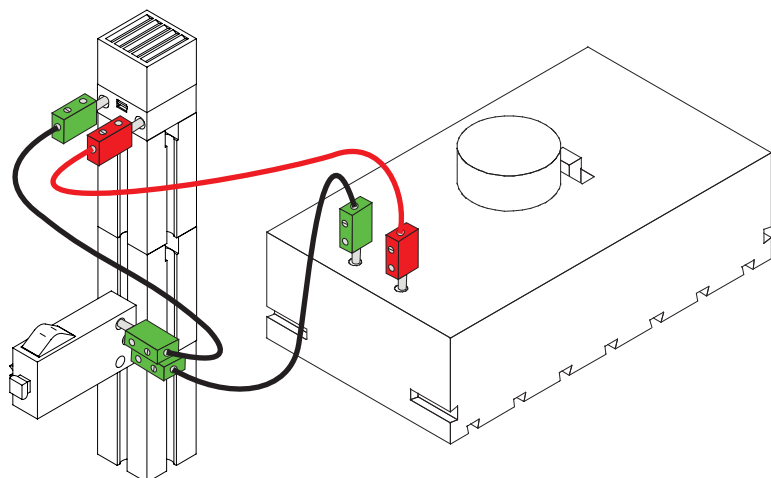


3

 


SKLOP 4

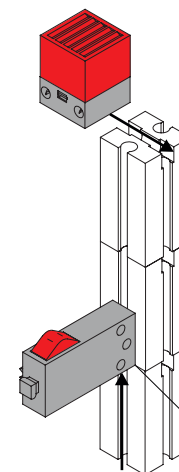 

 
tipkalo postaviti tako da donji brid bude uz donji brid srednjeg elementa (kao na slici)

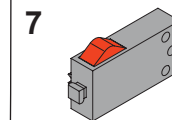


x 1 - 37783

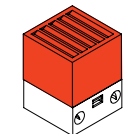 


x 1 - sklop 3

 

SKLOP 5

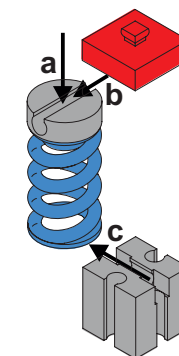 

8

 


x 1 - 37238

x 1 - 32881




x 1 - 31892

 
x 1 - 31891

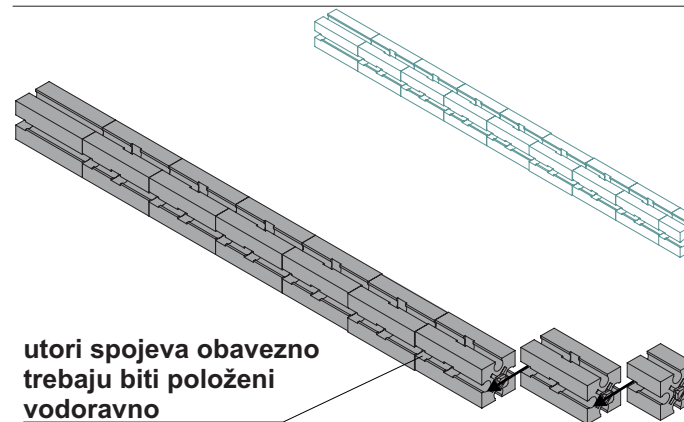

 
utori spojeva obavezno trebaju biti položeni vodoravno



x 7 - 32880

 


x 1 - 32879

 


x 1 - 32881

 4

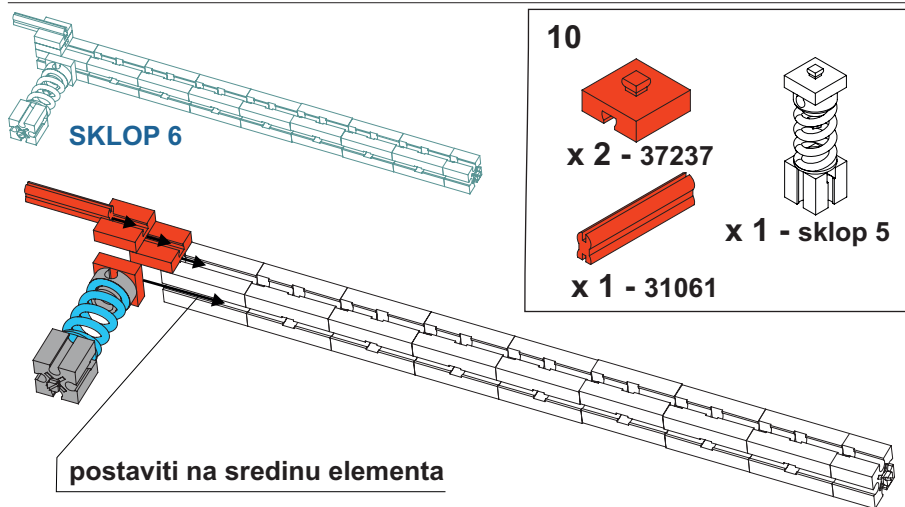


a) umetnuti spojnik u širi kraj rupe (ili spojnike)

 
b) potisnuti sklop ili element u smjeru užeg kraja rupe, tako da spojnik uđe u užu kraj rupe

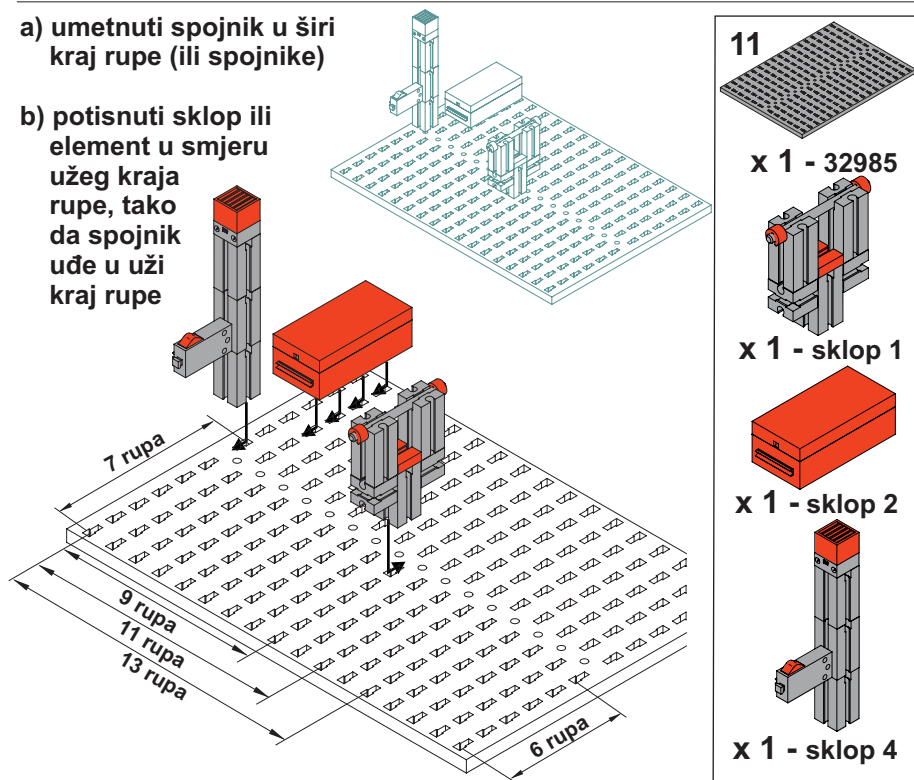

5

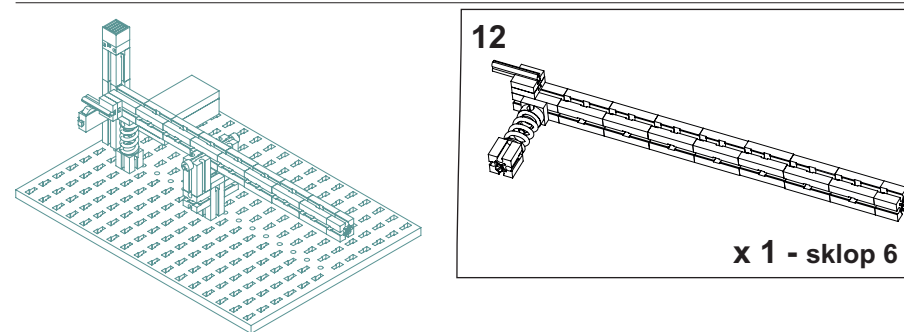 

 prije montaže sklopa 6 (poluge) potrebno je izvaditi osovinu oslonca iz ležišta, a zatim utaknuti kroz rupu na sredini elementa poluge

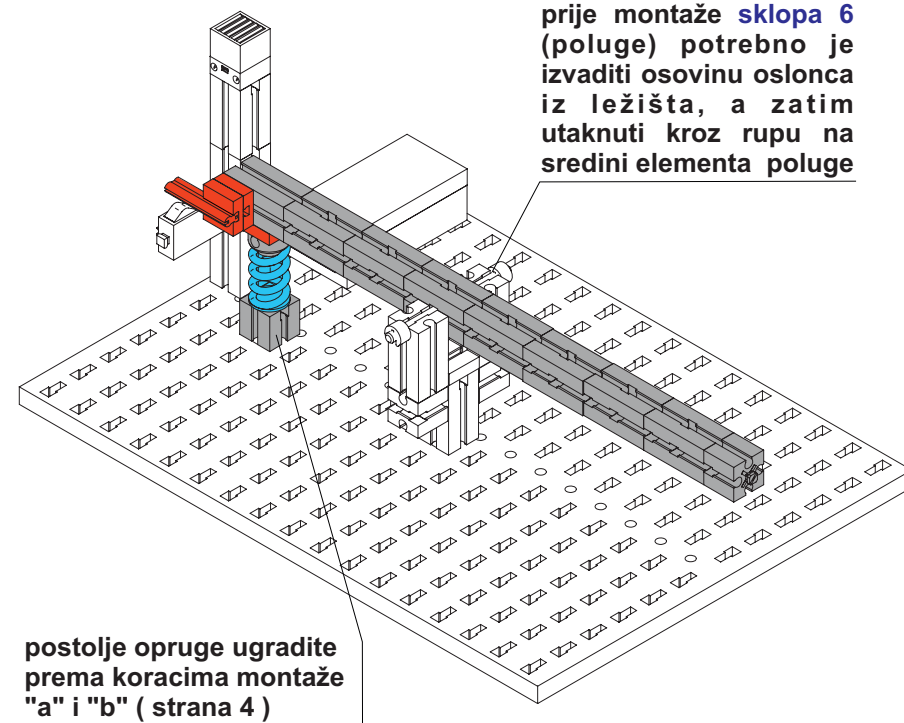

postolje opruge ugradite prema koracima montaže "a" i "b" ( strana 4 )